

TouchGuard Wear – User manual

1. App login



2. Dashboard



3. App logout



Take off the watch from your wrist after logging out of the application, i.e., when the list of users is displayed (see point 1).

4. User alarm (panic button)



5. Pre-alarm canceling

When an alarm is triggered based on sensor data, the so-called pre-alarm occurs. It lasts until the red line rewrites the entire circle.

Until then, the pre-alarm can be canceled.



The pre-alarm can be canceled by holding down your finger on the display until the white bar rewrites the entire circle.



6. Alarm

The alarm is indicated by the red background color



If the call is set, the watch starts dialing the phone numbers on the speakerphone.



You can terminate the call by holding down finger on the button

7. Terminating alarm on the watch

Swipe up and tap on



Choose Delete alarms



Enter PIN and tap on

